



取扱説明書





ディップ・スイッチ DIP SWITCH

DIP SWITCH 1		1	2	3	4	5	6	7	8
プレイヤー数 PLAYER'S NUMBER	3	OFF	OFF						
	2	ON	OFF						
	4	OFF	ON						
	1	ON	ON						
難易度 DIFFICULTY	普通 NORMAL			OFF	OFF				
	易しい EASY			ON	OFF				
	難しい HARD			OFF	ON				
	非常に難しい HARDEST			ON	ON				
スタート・エリア START AREA	No.1					OFF	OFF	OFF	
	No.2					ON	OFF	OFF	
	No.3					OFF	ON	OFF	
	No.4					ON	ON	OFF	
	No.5					OFF	OFF	ON	
	No.6					ON	OFF	ON	
	No.7					OFF	ON	ON	
	No.8					ON	ON	ON	
画面反転 SCREEN F/F	無し NO								OFF
	有り YES								ON
出荷時の設定 SETTING AT MAKER'S DELIVERY		OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

DIP SWITCH 2		1	2	3	4	5	6	7	8
COIN SWITCH 1	1 COIN 1 PLAY	OFF	OFF	OFF					
	1 COIN 2 PLAY	ON	OFF	OFF					
	1 COIN 3 PLAY	OFF	ON	OFF					
	1 COIN 4 PLAY	ON	ON	OFF					
	2 COINS 1 PLAY	OFF	OFF	ON					
	3 COINS 1 PLAY	ON	OFF	ON					
	4 COINS 1 PLAY	OFF	ON	ON					
	FREE PLAY	ON	ON	ON					
COIN SWITCH 2	1 COIN 1 PLAY				OFF	OFF	OFF		
	1 COIN 2 PLAY				ON	OFF	OFF		
	1 COIN 3 PLAY				OFF	ON	OFF		
	1 COIN 4 PLAY				ON	ON	OFF		
	2 COINS 1 PLAY				OFF	OFF	ON		
	3 COINS 1 PLAY				ON	OFF	ON		
	4 COINS 1 PLAY				OFF	ON	ON		
	FREE PL				ON	ON	ON		
デモ時のサウンド DEMONSTRATION SOUND	有り							OFF	
	無し							ON	
出荷時の設定 SETTING AT MAKER'S DELIVERY		OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

921211

BOMB JACK TWIN™

取扱説明書

注意事項 Technical information

(1)電源

Required Power Capacity

+5V 5A or more

+12V 1A or more

(2)Output

R—analog, positive

G—analog, positive

B—analog, positive

SYNC—H-V complexed, negative

⊕ サウンドボリューム
Sound adjustment

ディップスイッチ2
DIP SW 2

ディップスイッチ1
DIP SW 1

半田面 SOLDER SIDE			部品面 COMPONENT SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
COIN COUNTER2	J	8	COIN COUNTER1
	K	9	
SP(-)	L	10	SP(+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	T	16	COIN SW 1
START SW 2	U	17	START SW 1
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P PUSH 1	Z	22	1P PUSH 1
	a	23	
	b	24	
	c	25	
	d	25	
GND	e	27	GND
GND	i	28	GND

JAMMA仕様